

KS I	Zeile J-Schreib	Zeile J-Lesen	Spalte J-Schreib.	Spalte J-Lesen	T°C Raum	T°C KS-Fühler
alte Einstellg.	360	375	400	370	22,5	
neue Einstellg.	370 _A	375	375	375	"	32,5
KS II						
alte Einstellg.	375	380	400	380	"	
neue Einstellg.	375 _A	380 _A	385	385	"	25
KS III						
alte Einstellg.	350	350	370	360	"	
neue Einstellg.	370	370 _A	374	374	"	33
KS IV						
alte Einstellg.	420	380	410	410	"	
neue Einstellg.	386	380 _A	386	386	"	24,5
KS V						
alte Einstellg.	380	365	380	360	"	
neue Einstellg.	375	375	375	375	"	32,5
KS VI						
alte Einstellg.	395	390	400	400	"	
neue Einstellg.	386	386	386	386	"	24,5