

KS I	Zeile J-Schreib	Zeile J-Lesen	Spalte J-Schreib	Spalte J-Lesen	T°C Raum	T°C KS-Fühler	
alte Einstellg.	350	340	375	365	23	32,5	12,8V
neue Einstellg.	360A	360A	375	375			12,65
KS II							
alte Einstellg.	380	375A	360	375		24	13,1V
neue Einstellg.	386	386	386	386			13,1V
KS III							
alte Einstellg.	340	350	335	365		29	13,9
neue Einstellg.	377	377	377	377			12,8 A
KS IV						24,5	13,2
alte Einstellg.	360	365	360	370			
neue Einstellg.	375A	375A	385	385			13,05
KS V							
alte Einstellg.	375	355	330	355		30,5	13,4
neue Einstellg.	378	378	378	378			12,75 A
KS VI							
alte Einstellg.	315	330	330	315		25	13
neue Einstellg.	370A	370A	385	385			13

Kohl/Rödig